
Edgebanding Locations – Industry Standard

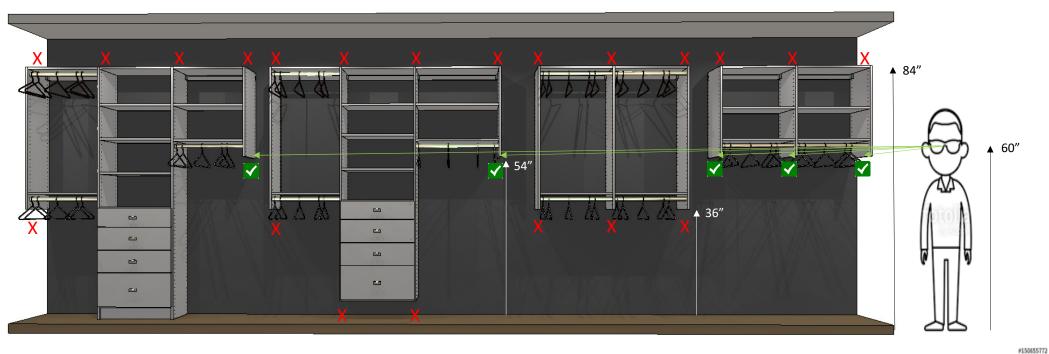

Industry standard:

-2020's default is set to front edgeband only. It is not height dependant! Pls use 3D View to see if edgebanding needs to be applied
-Rule of thumb: Whenever you can see an edge at near normal standing levels, is where you need to add extra edgebanding.
-Average eye sight is approx. 60", so anything that's 50" and higher from the ground requires edgebanding.
-Edgebanding locations can be added in "Features and Options" when the specific item is selected and are visible in 3D.
-Extra edgebanding does have a cost associated.