

MUDROOM

(Industry Standard Dimension)

- You must determine the overall height of your design based on the ceiling height itself and how much open top-shelf your customer wants, so you can do 84"H, 90"H, 96"H or 108", or higher, if the space allows it. You would create stackable.
- Your base system generally rests at 24"D or 19" D.
- Your bench height does not exceed overall height of 18".
- The upper system generally rests at 19"D or 14"D.
- Hooks can be placed at 48"H from the top of the bench upwards. You can either place a decorative panel that covers the full exposed wall above the bench and anchor the hooks onto it. Or, you can leave the wall exposed and anchor the hooks on a smaller strip of material that gets installed on the wall.
- You can put jackets behind closed doors in a shallower system but you must use hooks instead of a rod. Rods requires 24"D material to allow clothes to hang behind closed doors comfortably.
- Regular drawer boxes have pre-determine heights (6", 8", 9", 12") / (scooped 2", 3", 6", 8") and depths (12", 14", 16", 18", 22") but you can modify the width up to 36". Industry standard widths are 18", 24" and 30". Do not exceed overall height of 48" for drawer banks. TFL is available unassembled or assembled and dovetails are always assembled – default undermount soft-close slides at 50 lbs capacity.
- Accessories are 14"D and with standard widths of 18", 24" and 30". Accessories have side-mounted slides.
- Fillers will be used when installing next to a wall(s), eliminating the need for cutting materials, as the filler will be the piece that is modified.

Obstructions

- Ceiling light may impact how high you can take the material.
- Baseboard heights, light switch, outlets, heating and air vents, electric panels, attic space, and etc. are all items you must be mindful when taking your measurements. It is important you design around these items.
- When placing drawer boxes or slide-out accessories, be sure they clear door casing and baseboards and allow easy slide out.


MUDROOM

Edgebanding Locations – Industry Standard

PFC will edge band the front, top and bottom of all panels (Tall/Wall) that are produced in our facility, this is our default.

This covers and reduces the raw exposed edges on the panels, so when at the job site, the client will not see a lot of raw edges. Giving the product a higher-end look and feel.

Other vendors in the industry will edge band the front and sometimes the bottom, only when requested. As indicated on the image.

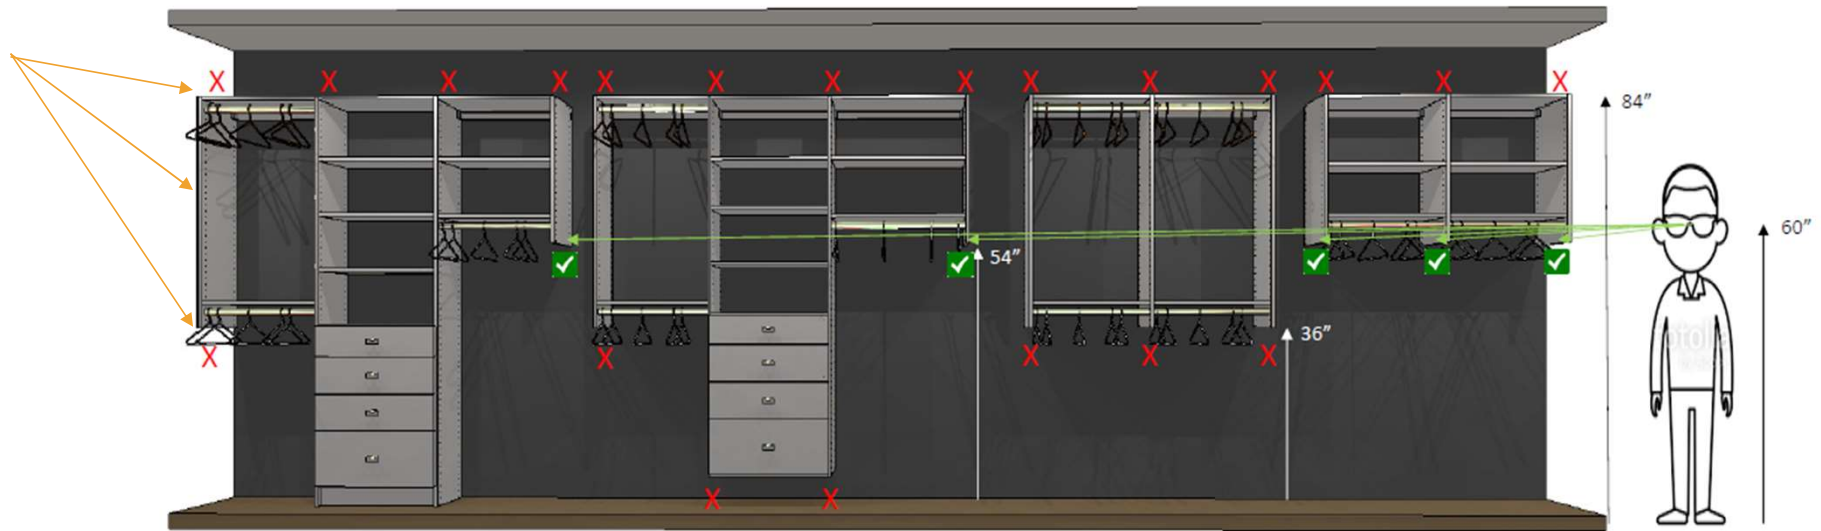

No one wants them any more – the unsightly adhesive joints between panels and edges, which fill with dirt and turn grey-brown over time. The trend towards zero joints in industry and trade is unstoppable and everyone wants to benefit from the sophisticated look “as if from a single source or 1 piece”. We provide 1mm edge tape on products produced at our facility.

Support@PerfectFitCanada.com OR 1866 227 2006

ACCESSORIES & LIGHTING

Plenty of accessory options to choose from; Closets, Garage, Office, Lighting and much more.



CLOSET ACCESSORIES



CLOSET OVAL ROD CHROME 8 1/4" M-04-5201



CLOSET OVAL HOLDER CHROME M-04-5211



DOOR LOCK RIGHT AND LEFT (RIGHT) AVAILABLE IN CHROME, MATT ALUMINUM, MATT NICKEL, MATT GOLD, OR STATE



DOOR CYLINDER ACCESS ALINE M-210-04-001



DOOR CYLINDER BEZEL COVER M-210-04-002



DOOR STRIKE PLATE CHROME 2 1/2" M-210-04-003



DRAWER LOCK



GARAGE ACCESSORIES



HANDLES



HOOKS



OFFICE ACCESSORIES



CLOSET LED LIGHTING

Support@PerfectFitCanada.com OR 1866 227 2006